




AP130 SOLDER FEED IRON

AP130 / SOLDER FEED IRON



INSTALLATION

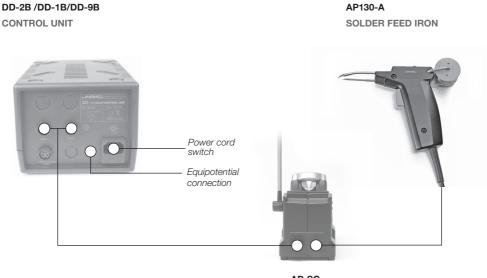


AP-SC SOLDER FEED STAND



CHANGING THE CARTRIDGE




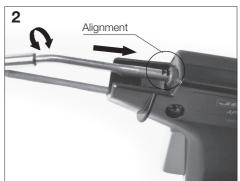

- Loosen the cartridge screw (1) to release the cartridge.
- Place the new cartridge in the solder feed handle.

 Important: It is essential to insert the cartridge till the end for a good connection.

- Align the tip of the cartridge with the solder guide tube (3). Tighten the cartridge screw (1).

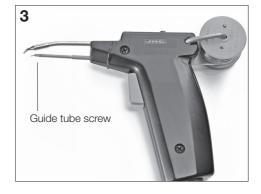

Warning: It is esential to tighten the cartridge screw for the tool to function.

REPLACING THE REEL





Before fitting a new reel, pull out the solder remaining inside the solder direction tube.



Insert the solder into its hole checking that the wire becomes straight. Pull the trigger intermittently until the solder feed system works by itself.

Always use 0.8 to 1.0 mm diameter solder wire.



SOLDER REEL HOLDER


For production-line purposes we recommend using our BE-SA holder which allows for solder reels of sizes up to 2.5 Kg to be used.

Simply wrap a couple of turns of the solder wire around an empty reel as shown.



BE-SA Solder reel stand



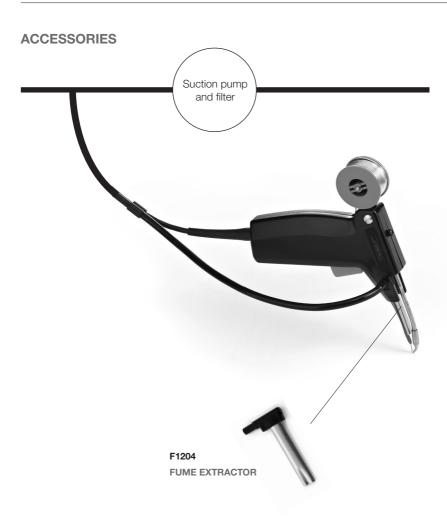




C130 CARTRIDGE RANGE

Consult our wide range of cartridges with more than 250 references in www.jbctools.com.

For special cartridges contact with our distributor.

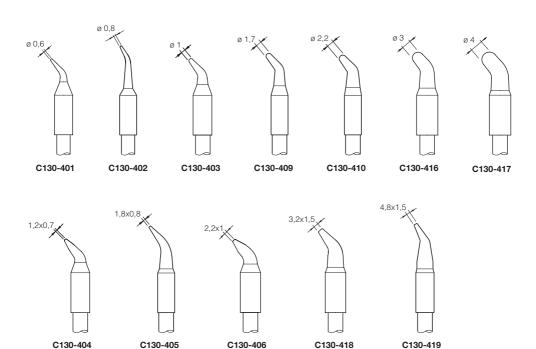

All the cartridges shown are actual size.



This product should not be thrown in the garbage.



WARRANTY

JBC's 2 years warranty guarantees this equipment against all manufacturing defects, covering the replacement of defective parts and all necessary labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this fully filled in, sheet.

SERIAL Nº		
STAMP OF DEALER		
DATE OF PURCHASE		